

CONTOUR

AMAZON

LARGE DIAMETER DEPTH FILTER CARTRIDGE

CONTOUR spun bonded cartridge filters utilise the very latest in high strength fibre production to create a large diameter core-free element. Engineered to operate in high flow applications, the high capacity, low pressure loss media is an ideal choice for use in a wide range of water and chemical processes. No resins, binders or other materials are used in the manufacturing process, this results in a fibre free, uncontaminated process fluid.

Utilising the housings own integral support core, this cartridge shows excellent performance in terms of life, disposal costs and overall cost effectiveness when compared to conventional cartridges.

CONTOUR cartridges are produced using a unique manufacturing process resulting in the following features:

High Efficiency Filter Media

- Available from 5 to 100µm+
- Consistent reliable performance

Unique Construction

- Core-free design
- Free from resin binders
- High void volume, resulting in low clean Δp and excellent dirt holding capacity
- Thermally bonded fibre matrix stops fibre migration
- One piece construction up to 1013mm (40")

Product Features

- 100% Polypropylene or Nylon 6 throughout
- Materials meet US FDA Title 21
- WRAS listed and Reg 31 approved for use in UK potable water supplies (PP only)
- No resins, binders or anti-static agents
- True graded density for enhanced life



CONTOUR fibres are blown continuously onto a central production mandrel, without the need for resin binders or lubricants. This results in a one piece, core-free construction that is resistant to unloading and media shedding. True depth filtration results from the closely controlled manufacturing process and environment, which also ensures a consistent and reliable high quality element.

Elements are available in two standard sizes, 508mm (20") and 1013mm (40"), double open ended format.

CONTOUR FEATURES AND BENEFITS

- Consistent and reliable performance and efficiency
- No resin binders - thermal bonding process stops media migration and ensures minimal extractables
- Identification imprinted on every cartridge
- Graded density structure for maximum dirt holding capacity
- Increased void volume giving high flow rates and low initial pressure losses
- Wide chemical compatibility, using 100% polypropylene or nylon media
- Range of ratings from 5 to 100µm+

CONTOUR

TECHNICAL DATA

Dimensions

Outside Diameter: 152mm
 Inside Diameter: 114mm
 Length: 508 and 1013mm


Maximum Operating Conditions

Temperature 14PW: 80°C
 14NW: 150°C

Recommended Maximum Differential Pressure: 1.5 Bar

Maximum ΔP	PW Media	NW Media
@ 30°C	4.0	4.0
@ 80°C	1	2.0
@ 130°C	N/A	1.0
@ 150°C	N/A	0.5

Product validation guide available on request.

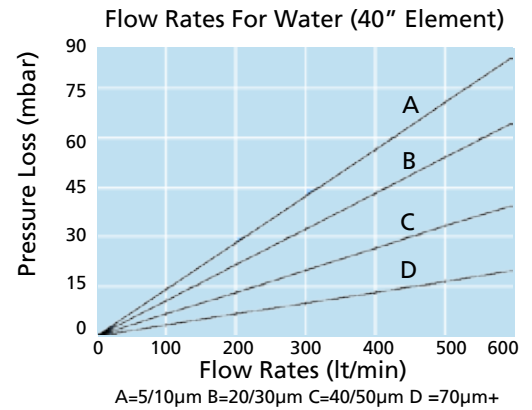

INDUSTRIES AND APPLICATIONS

Food and Beverage
Fine Chemicals
Petrochemicals
General Engineering
Metal Finishing
Automotive

- Bottled water, Polishing lines, Powder Trap filters
- Solvent trap filters
- Amine streams, Glycol solutions, Hydrocarbon (Kerosene), Wax based materials
- Return condensate
- Wash systems, Feed waters
- Electrophoretic paints, Phosphate lines, Pre treatment rinse

AMAZON FILTERS LTD.

ALBANY PARK ESTATE, FRIMLEY ROAD,
 CAMBERLEY, SURREY, GU16 7PG
 ENGLAND

Tel: +44 (0) 1276 670 600

Fax: +44 (0) 1276 670 101

Email: sales@amazonfilters.co.uk

Web: www.amazonfilters.co.uk



Certificate No. FM39584

Distributed by: